


Cat 6A Shielded Keystone Jack Termination Instructions

Toolless Termination




Maxxam Products:

XX6A0010 Cat 6A Shielded Keystone Jack

XX6A0025 Cat 6A Shielded Keystone Jack (Pack of 25)

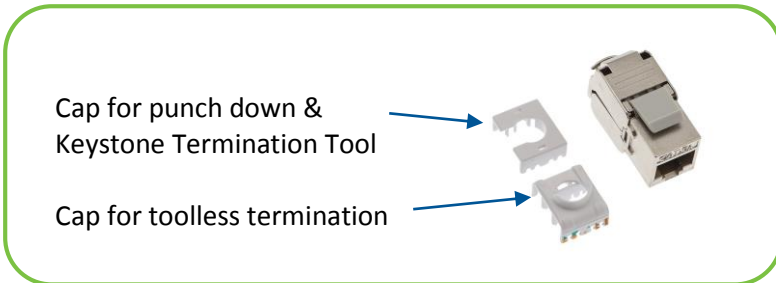


1. Remove approximately 50mm of the cable sheath and separate the 4 pairs.
2. If using U/FTP cable fold the foil of one of the pairs back and wrap it around the outside of the cable sheath with the silver surface on the outside.
If using F/FTP cable fold the overall foil back and wrap it around the outside of the cable sheath with the silver surface on the outside.
Wrap the drain wire around the outside of the foil and sheath.
If using S/FTP cable peel the braid back on itself.
3. Remove the foils from all of the pairs of wires, taking care to cut them back as close as possible to the end of the cable sheath.

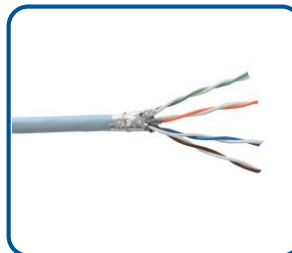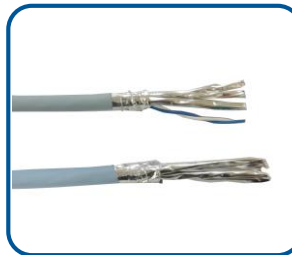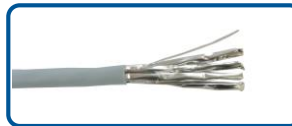

4. Pass the wires through the hole in the rear of the wire retention cap and dress the wires in to the appropriate coloured slots following the preferred wiring configuration.




5. Cut the wires flush with the outside edge of the wire retention cap.

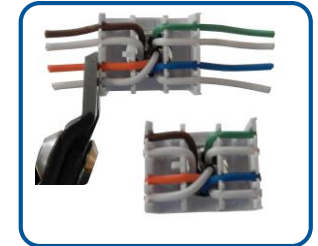

6. Fit the wire retention cap to the rear of the jack (it will only fit one way round) and push it down to seat the wires in to the IDC slots.



7. Close the rear covers of the jack. They should lock closed with an audible 'click'.

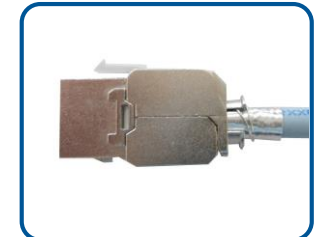

8. Secure the cable using a cable tie around the cable clamp flanges.

