

Unshielded Keystone Jack Termination Instructions


Keystone Termination Tool

Maxxam Products:


- XX60020 Cat 6 UTP Keystone Jack
- XX5E0018 Cat 5e UTP Keystone Jack




1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables, carefully cut back the central plastic separator flush with the cable sheath.

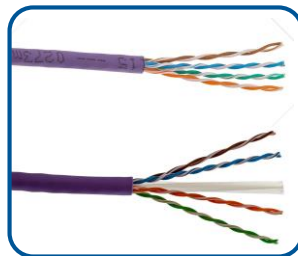

2. Present the cable at 90° to the rear of the jack and dress the wires in to the appropriate coloured IDC slots following the preferred wiring configuration.

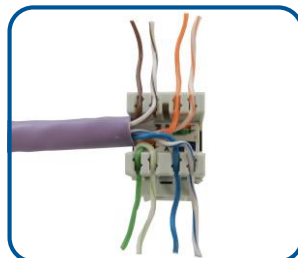

3. Insert the jack in to the Keystone Termination Tool as shown, ensuring that it is properly seated. Squeeze the handles of the Keystone Termination Tool together to terminate and trim the wires.

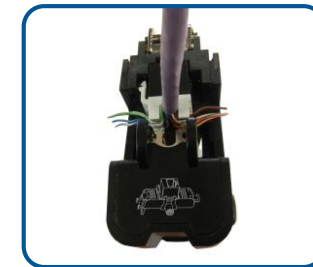

4. Remove the jack from the Keystone Termination Tool. Rotate the cable through 90° so that it is perpendicular to the jack and fit the wire retention cap.



5. Secure the cable to the strain relief flange using a cable tie, taking care not to over tighten it.

