


## Unshielded Module Termination Instructions

### Maxxam Products:

- XX60010 Cat 6 UTP Module 25 x 50
- XX60015 Cat 6 UTP Module LJ6c
- XX5E0010 Cat 5e UTP Module 25 x 50
- XX5E0015 Cat 5e UTP Module LJ6c




1. Remove approximately 50mm of the cable sheath and separate the 4 pairs.  
For Cat 6 cables, carefully cut back the central plastic separator flush with the cable sheath.

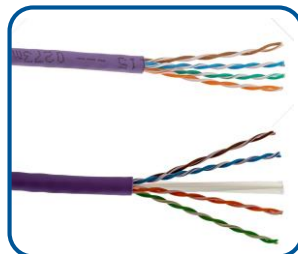

2. After deciding if cable entry will be at the top or bottom of the module place the cable so that the sheath end is close to the nearest IDC slots.



3. Dress the wires in to the appropriate coloured IDC slots following the preferred wiring configuration. Ensure that the cable pair twists are maintained as close as possible to the point of termination.

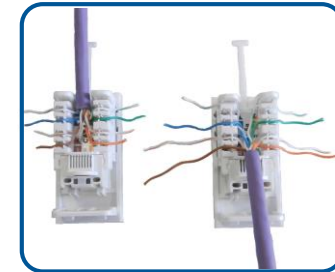

4. Punch down the wires using a 110 style termination tool. (A Krone tool may be used but take care not to damage the wires.)



5. When all of the wires have been terminated secure the cables to the strain relief tag or loop using cable ties, taking care not to over tighten them.



6. Fit the wire retention cap.

